

## AIR FLOW METER – DPT FLOW



### Model summary and technical data

Each device is individually temperature compensated.

Supported FAN manufacturers: Fläkt Woods, Rosenberg, Nicotra, Comefri, Ziehl, Ebm-Papst, Gebhardt

DPT Flow - D for display - AZ for autozero	P range	Accuracy for pressure **) within operation temp. -5...+50°C	Long term stability typical 1 year	
			-AZ	without-AZ
DPT Flow -7000 (-D, -AZ)	0...7000 Pa	± 7Pa + ± 1,5% from reading	≤ ± 1 Pa	≤ ± 24 Pa *)
DPT Flow -5000 (-D, -AZ)	0...5000 Pa	± 7Pa + ± 1,5% from reading	≤ ± 1 Pa	≤ ± 24 Pa *)
DPT Flow -2000 (-D, -AZ)	0...2000 Pa	± 5Pa + ± 1,5% from reading	≤ ± 1 Pa	≤ ± 8 Pa *)
DPT Flow -1000 (-D, -AZ)	0...1000 Pa	± 5Pa + ± 1,5% from reading	≤ ± 1 Pa	≤ ± 8 Pa *)

\*\*) including: general accuracy, temperature drift, linearity, hysteresis and repetition error

\*) - AZ model recommended

### Display

Alphanumeric display with MENU user interface

The display can be ordered separately for installation purposes.


Max. pressure            25 kPa  
Bursting pressure      50 kPa

Suitable media            Air and non-aggressive gases  
Measuring element      Piezoresistive

## MENU selections and initialization instructions for installation

If buttons are not pressed within 20 seconds the device returns to the normal measuring mode.

Press select >2 seconds

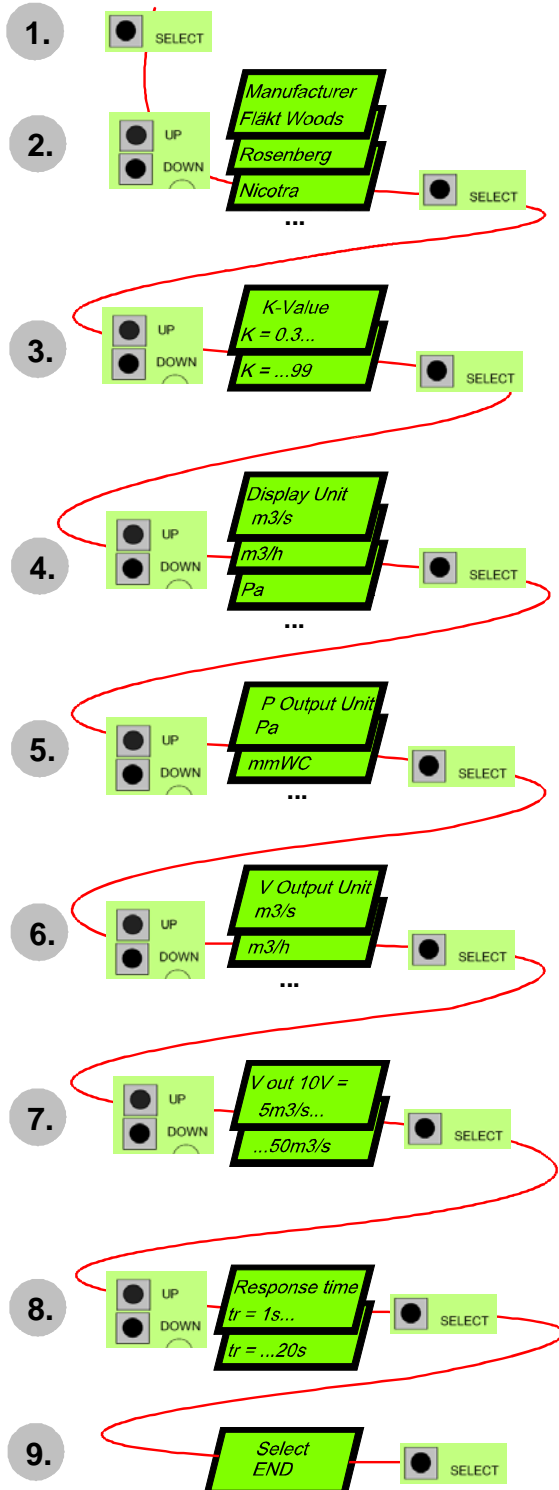

1. Press Select > 2 seconds to start the menu.

2. Selection of the manufacturer of FAN

3. Each FAN has its own specific K-value. Please see the right K-value from the datasheet of the FAN:

Fläkt Woods	(k=0,3...99)
Rosenberg	(k=37...800)
Nicotra	(c=10...1500)
Comefri	(k=10...2000)
Ziehl	(k=10...1500)
Ebm-Papst	(k=10...1500)
Gebhardt	(k=50...4700)

4. Display unit

m<sup>3</sup>/s, m<sup>3</sup>/h, cfm, l/s, scfh, lpm, kPa, mbar, mmWC, inchWC or Pa

5. Pressure output unit (and P output scale)

DPT Flow-7000	DPT Flow-5000	DPT Flow-2000	DPT Flow-1000
0...7000 Pa	0...5000 Pa	0...2000 Pa	0...1000 Pa
0...7 kPa	0...5 kPa	0...2 kPa	0...1 kPa
0...70 mbar	0...50 mbar	0...20 mbar	0...10 mbar
0...700 mmWC	0...500 mmWC	0...200 mmWC	0...100 mmWC
0...25 inchWC	0...20 inchWC	0...8 inchWC	0...4 inchWC

The maximum value gives 10V output signal

6. Flow output unit for defining the V output scale

7. V Output scale, selectable



m <sup>3</sup> /s	→ 10V = 1...50 m <sup>3</sup> /s
m <sup>3</sup> /h	→ 10V = 4 000 ... 200 000 m <sup>3</sup> /h
cfm	→ 10V = 2000 ... 100000 cfm
l/s	→ 10V = 1000 ... 50000 l/s
scfh	→ 10V = 100000...6000000 scfh
lpm	→ 10V = 60000 ... 3000000 lpm

8. Stepless response time selection.  
1s ... 20s.


9. Press end and the device returns to the normal measuring mode

## Electrical interface

Supply voltage	24 VAC or VDC $\pm$ 10%
Power consumption	< 1.0 W
Output signal	Vout 0...10 VDC, Load R minimum 1k $\Omega$ Pout 0...10 VDC, Load R minimum 1k $\Omega$

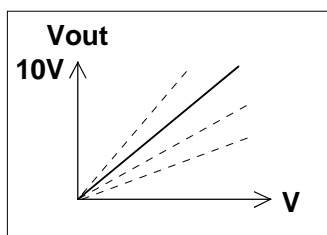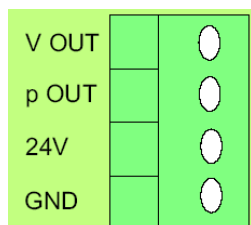

V out scale  
can be changed

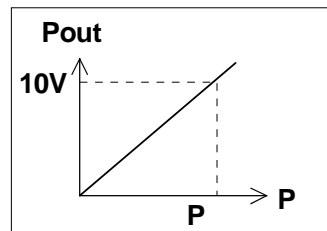

P scale  
table above

## Materials

Housing	ABS
Cover	ABS
Pressure connections	ABS
Duct connectors	ABS
Tubing	PVC, soft

## Connections

Electrical connections	4 screw terminals, max 1.5 mm <sup>2</sup>
Cable entry	M16
Pressure connections	Male $\varnothing$ 5,0 mm and 6,3 mm

## Weight

150 grams

## Dimensions

90,0 x 71,5 x 36,0 mm

## General ambient conditions

Temperature range	
Operation	-5...+50°C
Storage	-20...+70°C
Ambient humidity	0 to 95% RH

## Safety


Protection standard	IP54
---------------------	------

## Conformance

Meets the requirements for CE marking:

EMC directive 2004/108/EEC  
RoHS Directive 2002/95/EEC

## Auto zero element

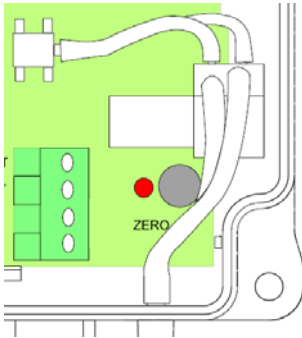

Auto zero element makes the DPT FLOW meter maintenance free. Element automatically adjusts the transmitters zero point from time to time, this eliminates the zero point long term drift of the piezoresistive sensing element.

During zero point adjustment the output and display values will freeze to the latest measured value. The automatic zero point adjustment takes 4 seconds. Zero point adjustment is carried out every 10 minutes normally and during warm up the time is shorter a few times.

If the device is not equipped with autozero element, it is recommended to carry out the zero point adjustment every 12 months. Supply voltage must be connected one hour before the zero-point adjustment is carried out.

- 1) Loose both tubes from the pressure inlets + and –
- 2) Push zero button until the red led turns ON.
- 3) Wait until LED turns off and then install tubes again to the pressure inlets

## Dimensions

